


Gillette®

powered by

BRAUN

360° Complete

550

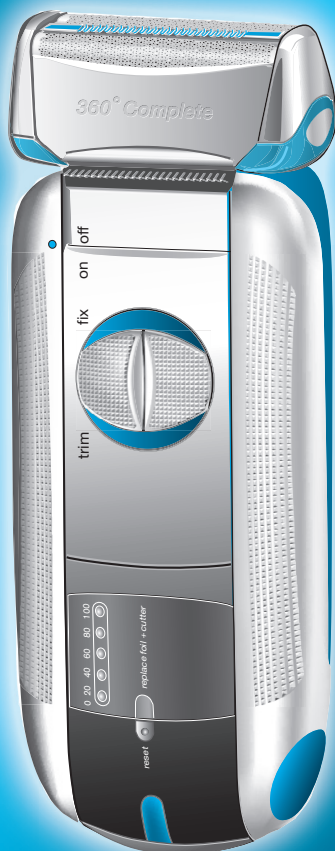

Type 5647



博朗咨询电话

免费顾客咨询热线: **800—820—1357**






手机用户免费咨询热线: **400—820—1357**

(以上咨询电话仅限中国大陆地区使用)

中文 4

English 10

Braun GmbH
Frankfurter Straße 145
61476 Kronberg / Germany

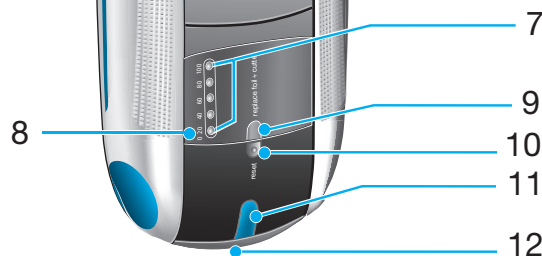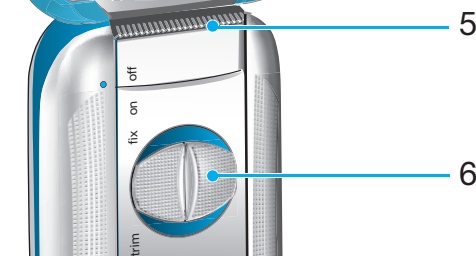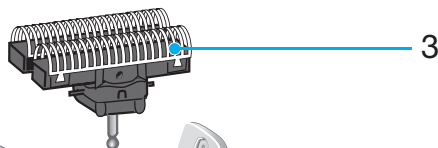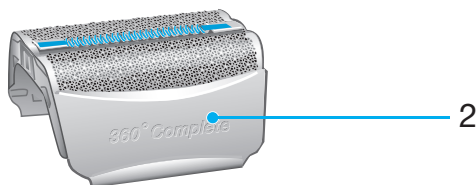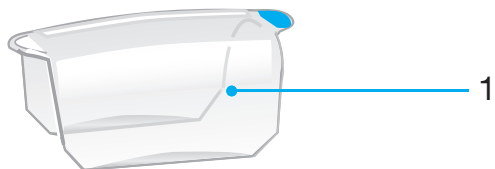


本产品设计优异、功能完善、质量可靠，满足高标准需求。希望您对新款吉列博朗剃须刀感到满意。

本机自动提示何时更换剃须网膜和刀头。

注意！

保持剃须刀干燥

本剃须刀配有集成化低压电源转换器。切勿更换或改装其中任何部件，否则有触电危险。

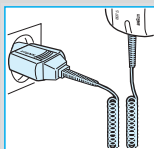

组件说明

- 1 网膜保护盖
- 2 网膜
- 3 网膜刀头
- 4 网膜松解按钮
- 5 长须修剪器
- 6 开关
- 7 充电指示灯（绿色）
- 8 低电量提示灯（红色）
- 9 更换零件提示灯
- 10 复位按钮
- 11 外接电源指示灯
- 12 剃须刀插座
- 13 专用电源线

充电


首次充电：关闭剃须刀，用专用电源线将剃须刀接通电源，至少充电4小时。充电时剃须刀和电源线可能发热。完全充电后应剃须至电量耗尽，然后再完全充电（1个小时）。

电池充满后不接电源线可使用 50 分钟，具体长度视胡须浓密程度而定。电池的最大容量需经过数次充电/放电循环后方能达到。


- 充电时的最佳环境温度为摄氏 15°C 至 35°C。
- 电池能量耗尽时，可直接用专用电源线接电剃须。

外接电源指示灯


指示灯 (11) 亮时表明剃须刀已接通外接电源。

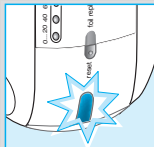

型号 550: 剃须刀完全充电后, 若剃须刀连接至外接电源或处于启动状态, 所有 5 个充电指示灯 (7) 均亮起 (每个指示灯代表 20% 电量)。

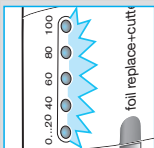

启动剃须刀时若电量低于 20%, 红色提示灯会亮起。此时剩余电量尚能进行 2 至 3 次剃刮。

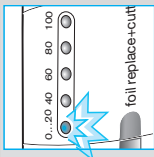

开关位置

关闭 = (开关被锁定)

按压并上推开关, 启动剃须刀。

启动 = 使用轮廓贴合刀头剃须





(轮廓贴合刀头自动调整, 顺应脸部轮廓)。


固定 = 锁定轮廓贴合刀头于某个角度剃须

(便于接触较难剃刮的部位, 如鼻子下面)

修剪 = 启用长须修剪器

(用于修剪鬓角、小胡子和胡须)。

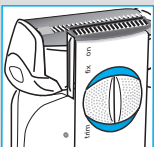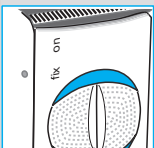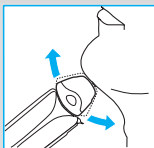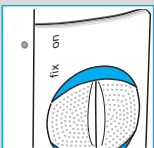

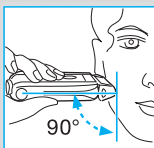

完美剃须的秘诀

- 皮肤遇水会略微膨胀, 所以建议洗脸前剃须;
- 剃须刀尽量与肌肤成 90 度直角, 逆着胡须生长方向剃刮;
- 为保持最佳性能, 请在更换零件提示灯 (9) 发亮 (约 18 个月) 后) 或零件发生磨损时更换网膜及刀头。





清洁

切勿用水清洁剃须刀!

每次剃须后的简便清洁方式为:

- 一关闭电源, 按下网膜松解按钮提升剃须网膜 (不要完全拆卸网膜), 启动剃须刀约 5-10 秒清除胡须断茬;
- 一拆卸剃须网膜, 在水平桌面上轻轻磕出胡须断茬;
- 一用刷子清洁旋转头内部。

切勿用刷子清洁网膜和刀头, 以免损坏。

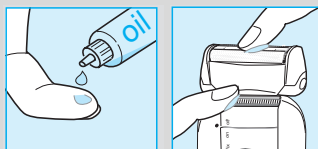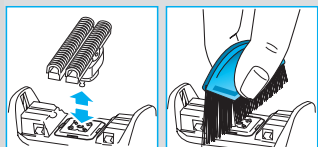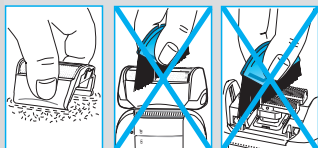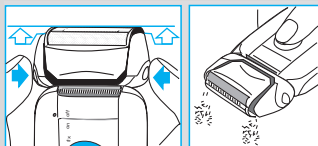


保养剃须刀于最佳状态

每四周左右用博朗清洁剂清洁刀头一次。在长须修剪器和网膜上滴加少量轻机油。

更换零件提示灯/复位

为保证完美的剃须效果, 在更换零件提示灯 (9) 发亮 (约在18个月) 后) 或零件发生磨损时, 应当更换网膜和刀头。两部件宜同时更换, 以使剃须更加顺贴, 减少皮肤反应。 (剃须网膜和刀头: 51S)

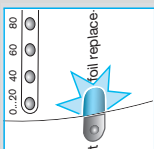

更换零件提示灯将连续七次在启动剃须刀时提醒更换零件, 然后自动恢复原显示。

更换网膜和刀头以后，用圆珠笔按压复位按钮（10）3秒钟，进行手动复位。

操作时更换提示灯会闪烁，并在复位完成时熄灭。手动复位可随时进行。

保存电池

为了保持充电电池的最佳容量，大约每六个月应当通过剃须完全放电一次，然后完全充满。本剃须刀不宜长时间置于超过 50 摄氏度的环境中。

环保提示

本产品内含充电电池。为了保护环境，请勿在达到使用寿命后与普通生活垃圾一起丢弃。请在国内专设的适当收集点处置，或交给博朗售后服务中心统一回收处置。



本说明可能在不作事先通知的情况下作出修改。

本产品符合欧洲 EMC 指令第 89/336/EEC 以及欧共体低压标准 2006/95/EC。



电气规格详见专用电源线标示。

保修

本产品保修期为购买之日起两年。保修期内凡因原材料或生产过程导致的各种瑕疵，本公司将视情况更换零件或整个产品。本保修条款适用于所有博朗公司或其指定经销商销售本产品的国家。

上述保修承诺不适用于下述情形：

- 使用不当造成的产品损坏（包括但不限于使用错误的电流、电压，将产品插入不合适的插座及其他人为损坏）。
- 网膜和刀头磨损。
- 对正常使用影响不大的瑕疵。
- 非家庭使用（如工业、商业用）引起的损坏。

一旦由未获授权人员修理、或换用非博朗原装零配件，本保修立即终止。

保修期内提供的服务不影响保修期的终止。保修期中替换的零件或整机的保修服务，与本产品的保修期同时终止。

本保修不影响法律明文规定的权利。

如需保修或维修，请携带整机和购货发票，与当地或就近的维修站联系。

顾客免费热线：800-820-1357

最新Braun售后服务部地址

城市	公司名称	地址	联系电话
中区			
200085	上海 安帮北站天路电器安装维修服务社	上海市永兴路540号(靠近西藏北路)	63566755/56329466
200235	上海 乐帮新募办公设备维修服务社	上海市漕溪路190号(靠近田林东路)	64688241
201100	上海 上海市闵行区博洁电器维修部	上海市闵行区莘建东路210号(莘庄地铁站-北广场)	64122533
310016	杭州 杭州中侨家电维修服务有限公司	杭州市采荷路10号	86047438
266071	青岛 青岛市市南区超维影视通讯技术服务部	青岛市市南区银川西路3号政泰商务楼202室	85977910
361003	厦门 厦门市思明区新鹭声电子技术服务部	厦门后埭溪路248号之6、7、8号	5170118/5170633
210003	南京 南京博伊华电子电路经营部	南京市中山北路223号陆龙电子城128包间	83420092
315040	宁波 宁波市江东明楼甬城家电维修部	宁波市江东惊驾路506号	87771344
315000	宁波 宁波海曙创佳数码家电维修部	宁波市苗圃路39弄50号(海关对面)	87134422
250100	济南 济南三能通信设备有限公司	济南市解放路30号国华经典3号楼1单元1104	88388197
230001	合肥 合肥数码技术服务部	合肥市庐江路54号	2655887/2654456
450000	郑州 郑州晟辉商贸有限公司	郑州市兴隆街8号郑州大酒店B座2306室	66770865
北区			
100078	北京 北京盛侨家用电器维修服务中心	北京市丰台区方庄芳群园2区6号楼金芳公寓304室	67698025/67630617
100035	北京 北京盛侨家用电器维修服务中心	北京市西城区西直门内大街南草厂街甲11号楼318室(长城商务写字楼)	66561976
050021	石家庄 河北省家用电器维修中心	石家庄市槐北路70号	86011793
300022	天津 天津市家维服务中心	天津市和平区滨江道109号	27120170
110011	沈阳 沈阳市沈河区东业电器维修中心	沈阳市沈河区承德路36-1	24870309
150010	哈尔滨 哈尔滨市道里区信誉进口家电维修部	哈尔滨市道里区地段街190号	84644674
116021	大连 大连市沙河口区现代电子技术服务部	大连市沙河口区西南路791号-7-3	86841988
130042	长春 吉林省百文礼品文具有限公司	长春市南关区大经路370号	88741702
710014	西安 陕西百利商贸有限公司	西安市丰禾路6号丰禾小区22号楼2楼	86220211
南区			
510600	广州 广州市金永利电器有限公司	广州市寺右新马路南二街24号	87386165(6)
518028	深圳 深圳市顺电连锁股份有限公司	深圳市华强北路上步工业区202栋2楼东	83286255
400014	重庆 重庆市渝中区中侨家用电器维修部	重庆市渝中区中山三路44号附2号	63527117
530001	南宁 南宁市南方家用电器维修中心	广西南宁市唐山路29号首层	3118895/3907787
650032	昆明 昆明松和电器有限公司	昆明市三合营路25号附2号	3645557
430015	武汉 武汉市江岸区兆利达家电维修中心	汉口解放大道1439号4栋3单元101室	85790611
610017	成都 成都市武侯区金维电子经营部	成都市大安东路57号3-6号	86944135
528200	佛山 佛山市禅城区得盛家用电器维修部	佛山市城门西商业街10号	83213535
350001	福州 福州福春电器维修服务有限公司	福州市塔头路328号顺意园一楼店面(福州锅炉厂对面)	87582122
325000	温州 温州市声像技术服务公司	温州市马鞍池东路45-47号	88850706

上海涵思贸易有限公司可办理零件及产品邮购
E-mail: shanghaihansi@163.com


电话: (021)64606449
邮编: 201100

注: 如果当地无特约维修站, 请与就近的维修站联系
顾客咨询热线: 800-820-1357 / 400-820-1357(手机用户)

BRAUN
德国博朗

博朗(上海)国际贸易有限公司
中国上海浦东三林路550号
邮编: 200124

上述维修站更新于2007年4月
如有变更, 恕不另行通知

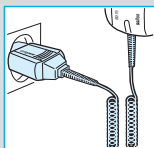

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Gillette shaver powered by Braun. The system tells you when to replace the shaving foil and cutter block.

Warning

Keep the appliance dry. Your shaver is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is a risk of electric shock.

Description


- 1 Foil protection cap
- 2 Shaver foil
- 3 Cutter block
- 4 Release buttons
- 5 Long hair trimmer
- 6 Switch
- 7 Charging lights (green)
- 8 Low charge light (red)
- 9 Replacement light for shaving parts
- 10 Reset button
- 11 Pilot light
- 12 Shaver socket
- 13 Special cord set

Charging the shaver


- When charging for the first time: Using the special cord set, connect the shaver to an electrical outlet. The shaver must be switched off. Charge it for at least 4 hours (special cord set and shaver might get warm). Once the shaver is completely charged, shave until fully discharged. Then recharge to full capacity again (1 hour).
- A full charge will give up to 50 minutes of cordless shaving time, depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- Best environmental temperature range for charging is from 15 °C to 35 °C.
- When fully discharged, you may also shave with the shaver connected to an electrical outlet via the special cord set.

Indicator lights


Pilot light (11): The shaver is connected to an electrical outlet.

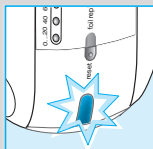

Model 550: When the shaver is fully charged, all five charging lights (7) will light up (20% per light), provided the shaver is connected to an electrical outlet or switched on.

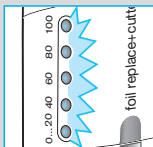

The red low charge light (8) flashes when the battery capacity has dropped below 20%, provided the shaver is switched on. The remaining capacity will then be sufficient for 2 to 3 shaves.

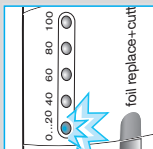

Shaving

Switch positions






off = (switch is locked)


Press and push up the switch to operate the shaver:

on = Shaving with the pivoting head
(the pivoting cutting system automatically adjusts to every contour of your face).

fix = Shaving with the pivoting head locked at an angle
(to permit shaving in difficult areas, e.g. under the nose).

trim = The long hair trimmer is activated
(for trimming sideburns, moustache and beard).

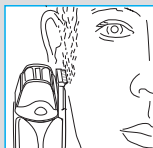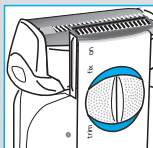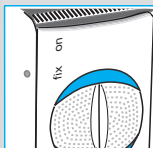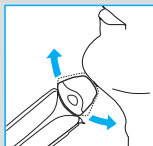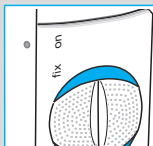

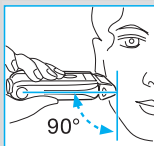

Tips for the perfect shave






- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch your skin and shave against the direction of beard growth.
- To maintain 100% shaving performance, replace your foil and cutter block, when the replacement light (9) comes on (after about 18 months), or when worn.

Cleaning

Never use water to clean the shaver.

For easy cleaning after each shave, switch the shaver off. Press the release buttons to lift the shaver foil (do not remove the foil completely). Switch on the shaver for approx. 5–10 seconds so that the shaved stubbles can fall out.

Then remove the shaver foil and tap it out on a flat surface. Using the brush, clean the inner area of the pivoting head. However, do not clean the shaver foil nor the cutter block with the brush as this may damage them.

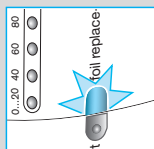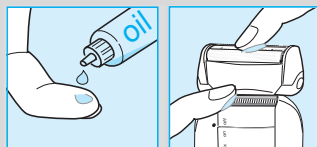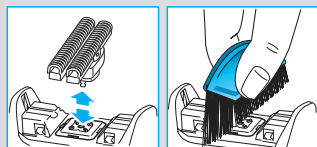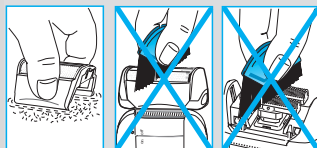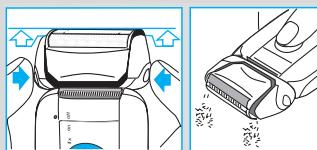

Keeping your shaver in top shape

About every four weeks, clean the cutter block with Braun cleaning agents. Put a drop of light machine oil onto the long hair trimmer and the shaver foil.

Replacement light for shaving parts / Reset

To maintain 100% shaving performance, replace your foil and cutter block, when the replacement light for shaving parts (9) comes on (after about 18 months) or when worn. Change both parts at the same time for a closer shave with less skin irritation.

(Shaver foil and cutter block: 51S)

The replacement light will remind you during the next 7 shaves to replace the shaving parts. Then the shaver will automatically reset the display.

After you have replaced the shaving parts (foil and cutter block), use a ball-pen to push the reset button (10) for at least 3 seconds to reset the counter.

While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (through normal use) every 6 months approximately. Then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 2006/95/EC.



For electric specifications, see printing on the special cord set.